

INSTRUCTIONS DE MONTAGE / INSTALLATION INSTRUCTIONS

Objet : Moteur SISME 5 vitesses pour MELODY type WA / SISME motor with 5 speeds for MELODY type WA


Raccordements électriques des anciens moteurs à remplacer sur site

Electrical connections of old motors to be replaced on site

Code CIAT 3263097


7 vitesses / 7 speeds

Ref K48410 M01781

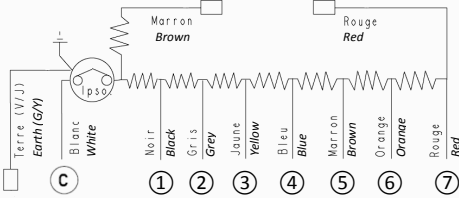
Code CIAT 3263104

5 vitesses / 5 speeds

Ref K48407 M01855

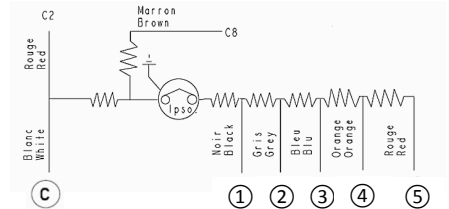

INSTRUCTIONS DE RACCORDEMENT ELECTRIQUE / INSTRUCTIONS FOR ELECTRICAL CONNECTION


Remplacement sur site des anciens moteurs ci-dessus ⇒ prévoir les raccordements électriques pour les 3 vitesses utilisées en standard, conformément au tableau. Garder les raccordements existants de la borne © (fil blanc).

Replacement on site for old motors above ⇒ provide electrical connections for the 3 speeds used in standard, in accordance with the table. Keep existing electrical connections on terminal © (white cable).

Codes CIAT 7174351 ou/ou 7174352 ou/ou 7174353

Moteurs / Motors SISME 5 vitesses / 5 speeds

Ref K35414 M02148/M02141/M02139

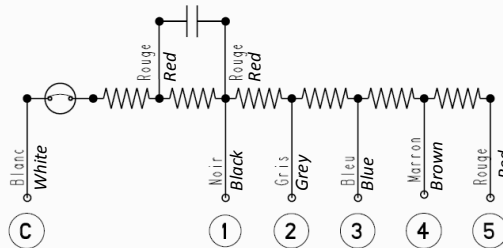

BORNES A RACCORDER POUR VITESSES STANDARD TERMINALS TO BE CONNECTED FOR STANDARD SPEEDS

| Type Type | Petite Vitesse Low Speed | Moyenne Vitesse Medium Speed | Grande Vitesse High Speed |
|--------------|-----------------------------|---------------------------------|------------------------------|
| WA 61 | ⑤ | ④ | ② |
| WA 62 | ⑤ | ④ | ② |
| WA 63 | ④ | ③ | ② |
| WA 122 | ④ | ③ | ② |
| WA 123 | ④ | ③ | ② |